

PI-25

FOR 2.5 GIGABIT POWER OVER ETHERNET
(POE/POE+) INJECTOR

Quick Setup Guide

- A** Connect one end of the Ethernet cable into the LAN (PoE) port of the Access Point and the other end to the PoE port on the PoE power injector.
- B** Connect the Power cord with the PoE Adapter and plug the other end into an electrical outlet.
- C** Connect the second Ethernet cable into the LAN port of the PoE power injector and the other end to the Ethernet port on the router or switch.

Luxul recommends the use of [C2G ethernet cables](#).

