

# MEGAPIX PAND



MEGApix IVA+ models	9MP model	5MP model
DWC-PPVF9Di2TW DWC-PPVF5Di1TW	DWC-PVF9Di2TW	DWC-PVF5Di1TW



### Default Login Information: admin | admin

When logging into the camera for the first time, you will be prompted to set up a new password. You can set the new password using the DW<sup>®</sup> IP Finder<sup>™</sup> software or directly from the camera's browser menu.

WHAT'S IN THE BOX					
Quick Setup and Download Guides		1 set	Mount Bolts and Nuts - 2pcs	@@	1 set
Metal Mounting plate	E B	1	Screws and Plastic Anchors - 3pcs		1 set
Mounting Template for Bolt and Nut Installation		1	Waterproof Cap and Gasket	$\square \circ$	1 set
Mounting Template for Metal Plate Installation		1	Star Wrench		1

#### NOTE: Download all your support materials and tools in one place

- 1. Go to: http://www.digital-watchdog.com/resources
- 2. Search your product by entering the part number in the 'Search by Product' search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
- 3. Click 'Search'. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.

Attention: This document is intended to serve as a guick reference for the initial setup. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

Tel: +1 (866) 446-3595 / (813) 888-9555

digital-watchdog.com

Technical Support Hours: 9:00 AM - 8:00 PM EST, Monday through Friday

# STEP 1 - PREPARING TO MOUNT THE CAMERA

- 1. The mounting surface must bear five times the weight of your camera.
- 2. Do not let the cables get caught in improper places or the electric line cover to be damaged. This may cause a breakdown or fire.
- 3. Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling.

## STEP 2 - POWERING THE CAMERA

- Pass the wires through and make all the necessary connections.
- a. NETWORK CONNECTIONS If you are using a PoE switch. connect the camera using an Ethernet cable for both data and power.
- b. NETWORK CONNECTIONS If you are using a non-PoE switch, connect the camera to the switch using an Ethernet cable for data transmission and use a power adapter to power the camera.

Model	Power Requirements	Power Consumption
DWC-PPVF9Di2TW DWC-PVF9Di2TW	DC12V, PoE IEEE 802.3af Class 3. (Adapter not included)	DC12V: max 8.5W PoE: max 10W
DWC-PPVF5Di1TW DWC-PVF5Di1TW		DC12V: max 7.5W PoE: max 8.7W


# STEP 3 - INSTALLING THE CAMERA

- 1. Once all cables are connected, secure the camera to the mounting surface using the included screws.
- 2. For soft installation surfaces, use the included metal mount plate. Fix the mounting plate on the mounting surface using the included screws. Then, press the bottom case onto the mounting plate. The three bezels on the case will align and snap lock onto the plate.
- 3. To use the camera's waterproof wiring: (1).Install the LAN cable into 6.
- (2). 6 will be assembled to 6 with a 1/4 turn.

(3). Thread 📀 tightly to 🕞


**NOTE:** To ensure moisture seal, make sure the o-ring is in place between and b. In extreme environments use of an outdoor rated sealer is recommended.

- **NOTE:** When using the waterproof cap, crimp the RJ45 connector after passing the cable through the waterproof cap.
- 4. Re-attach the camera's gasket ring and dome to the camera module by aligning the screw holes. Align the wedge on the side of the camera with the one on the mounting bracket.

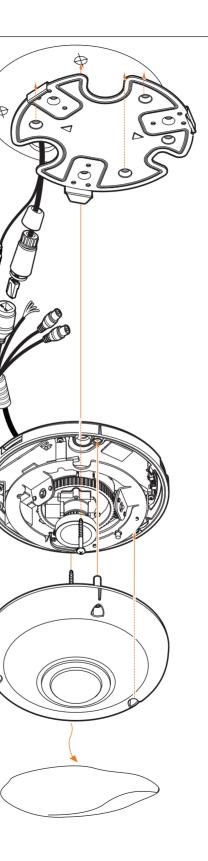

Installation using mount bolt and screws:


- 1. Using the template sheet for the nuts and bolts installation, mark and drill the holes on the mounting surface.
- 2. Secure the two long mounting screws to the camera's base.
- 3. Pass the wires through the mount bracket and make all necessary connections.
- 4. Mount the camera to the mounting surface by using the 2 mounting nuts. Rotate the locking discs over the screws until the camera is held tightly from the mounting surface.
- 5. Re-attach the camera's gasket ring and dome to the camera module by aligning the screw holes. Be sure to align the wedge on the side of the camera with the one on the mounting bracket.

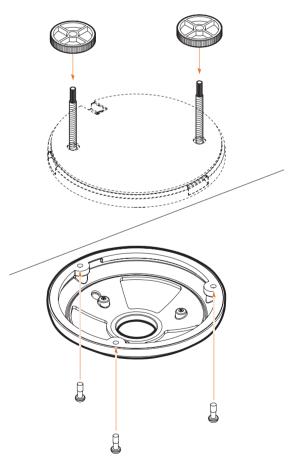

Resetting the camera: To reset the camera, use the tip of a paper clip or a pencil and press the reset button. Pressing the button for five (5) seconds will initiate a camera-wide reset of all the settings, including network settings.



# MEGAPIX PAND

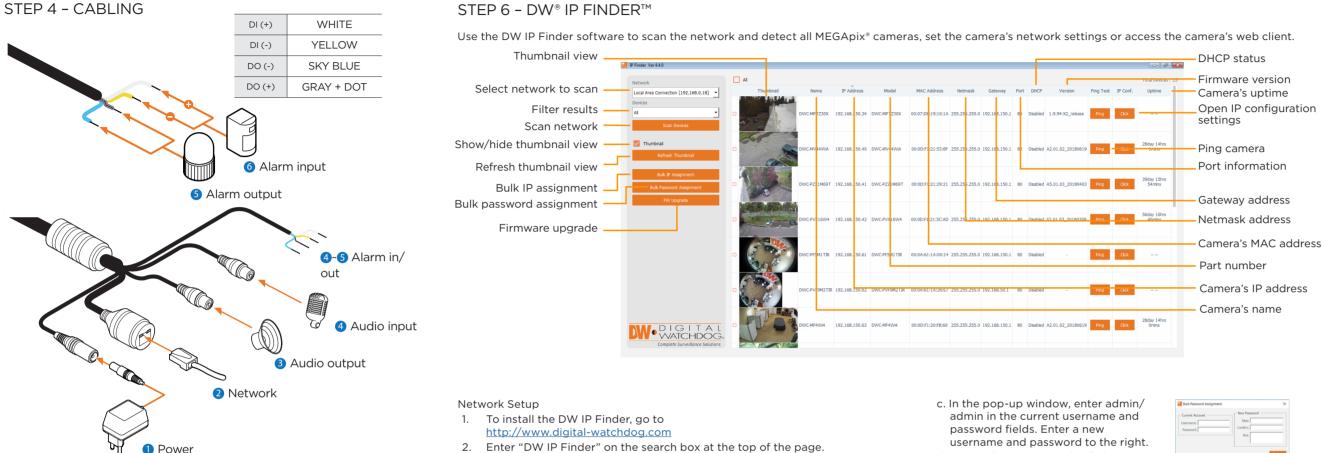

### STEP 5 - MANAGING THE SD CARD

To install the memory card:

- 1. The SD card slot is located next to the reset button.
- 2. Detach the camera's cover dome from the camera's module by unscrewing the cover dome screws.
- 3. Insert a Micro SD/SDHC class 10 card according to the diagram.
- 4. To remove the SD card, press the card gently into the card slot to release it. The card will pop out automatically.



# STEP 6 - DW<sup>®</sup> IP FINDER<sup>™</sup>

- Enter "DW IP Finder" on the search box at the top of the page. 2.
- Go to the "Software" tab on the DW IP Finder page to download 3. the installation file.
- 4. Follow the installation to install the DW IP Finder. Open the DW IP Finder and click 'Scan Devices'. It will scan the selected network for all supported devices and list the results in the table. During the scan, the DW® logo will turn gray.
- **1** Select DHCP to allow the camera to receive its IP address automatically from the DHCP server.
- 1 Select "Static" to manually enter the camera's IP address, (Sub)Netmask, Gateway and DNS information. \* The camera's IP must be set to Static if connecting to Spectrum<sup>®</sup> IPVMS
- Contact your network administrator for more information.
- Default TCP/IP information: DHCP
- 5. When connecting to the camera for the first time, a password must be set. To set up a password for your new camera:
  - a. Check the box next to your new camera from the IP Finder's search results. You can select multiple cameras.
  - b. Click "Bulk Password Assign" on the left.

- username and password to the right.
- d. Press "change" to apply all changes.
- 6. Select a camera from the list by double-clicking on the camera's image or clicking on the 'Click' button under the IP Conf. column. The pop-up window will show the camera's current network settings, allowing admin users to adjust the settings as needed.
- 7. To access the camera's web page, go to the IP Config page and click on the 'View Camera Website'.
- 8. To save the changes made to the camera's setting, input the username and password of the camera and click Apply.
- () 'Port forwarding' has to be set in your network's router for external access to the camera.

Bulk Password A	ssignment			>
Current Account Usemame Password		New Password - New Confirm Hint	0	ange
Name	MAC Address	IP Address	Note	
DWC-MF2Wi4T 00	0DF1215692 1	92.168.10.159		
Camera Setting	<b>2</b> 5		?	×
l Camera Setting Camera Name		WC-MD421TIR	?	×
Camera Name		WC-MD421TIR :0D:F1:20:A4:9		×
Camera Name MAC Address	00			×
Camera Name MAC Address IP Configuratio DHCP	00			×
Camera Name MAC Address IP Configuratio	00			×
Camera Name MAC Address IP Configuratio DHCP	00 n Mode			×
Camera Name MAC Address IP Configuratio DHCP Static IP	n Mode 19	:0D:F1:20:A4:9		×
Camera Name MAC Address IP Configuratio DHCP Static IP IP Address	00 n Mode 19 25	:0D:F1:20:A4:9		×
Camera Name MAC Address IP Configuratio DHCP Static IP IP Address Netmask	00 00 n Mode 19 25 15	:0D:F1:20:A4:9 2.168.1 .101 5.255.255.0		
Camera Name MAC Address P Configuratio O DHCP O Static IP IP Address Netmask Gateway	00 00 n Mode 19 25 15	:0D:F1:20:A4:9 2.168.1 .101 5.255.255.0 12.168.1 .1		
Camera Name MAC Address IP Configuratio DHCP Static IP IP Address Netmask Gateway DNS Ports	00 00 n Mode 19 25 15	:0D:F1:20:A4:9 2.168.1 .101 5.255.255.0 12.168.1 .1		
Camera Name MAC Address IP Configuratio IP Address IP Address Netmask Gateway DNS Ports Web Port	000 n Mode	:0D:F1:20:A4:9 2.168.1 .101 5.255.255.0 12.168.1 .1		
Camera Name MAC Address IP Configuratio (a) DHCP (b) Static IP IP Address Netmask Gateway DNS	000 n Mode	:0D:F1:20:A4:9 2.168.1 .101 5.255.255.0 12.168.1 .1		
Camera Name MAC Address P Configuratio O Static P D Address Netmask Gateway DNS Ports Web Port Control Port	000 n Mode	:0D:F1:20:A4:9 2.168.1 .101 5.255.255.0 12.168.1 .1		

## STEP 7 - WEB VIEWER



The GUI display may differ by camera models

Once the camera's network settings have been setup properly, you can access the camera's web viewer using the DW IP Finder.

To open the camera's web viewer:

- 1. Find the camera using the DW IP Finder.
- 2. Double-click on the camera's view in the results table.
- 3. Press the 'View Camera Website'. The camera's web viewer will open up in your default web browser.
- 4. Enter the camera's username and password you setup in the DW IP Finder. If you did not setup a new username and password via the DW IP Finder, you will not be able to view video from the camera. A message will direct you to setup a new password for the camera to view video

S http://192.168.10.159/ - IP Camera - Internet Explorer		-		×	
Change admin's password					
Password					
Retype Password					
Password Hint					
	[ Type the Pass	sword	]		
Password requirement : minimum 8 characters with at least three combinations of uppercase letters, lowercase letters, numbers and special characters. Acceptable special characters are; ~ '1 \$ ^ () { }_{[]}. ? /					
CHANGE PASSWORD	CHANGE LATER			$\sim$	
<				>	

- 5. When accessing the camera for the first time, install the VLC player for web files to view video from the camera.
- **NOTE:** 32bit version of the VLC player must be installed. If you are using a 64bit system, uninstall the previous 64bit version and reinstall using the 32bit version.
- NOTE: Some menu options may not be available based on the camera model. See the full manual for more information.