



**NAPCO**

333 Bayview Avenue  
Amityville, New York 11701  
For Sales and Repairs, (800) 645-9445  
For Technical Service, (800) 645-9440

Publicly traded on NASDAQ Symbol: NSSC

© NAPCO 2011

# GEM-EZM4 & GEM-EZM8 ZONE EXPANSION MODULEs DATA SHEET

WI1979 09/11

## DESCRIPTION

The capacity of the GEM-Series control panels may be expanded with the use of GEM-EZM modules. The GEM-EZM4 provides four additional zones; the GEM-EZM8 provides 8 additional zones with the option to be configured for only 4 zones. The 4-zone and 8-zone modules as well as GEM-RP1CAe2 4-zone EZM modules may be combined as necessary to supply the required number of zones. Refer to the installation instructions for the control panel in use for wiring requirements for UL-listed applications.

## WIRING

Wire the expansion zones to the module and the module to the control panel in accordance with the wiring diagrams using wire no thinner than #22AWG. Install 2.2KΩ end-of-line resistors on all zones even if one or more zones are not used. **Note:** The addition of Zone Expansion Modules will reduce the amount of standby current available at the control panel's Auxiliary Power Output terminals.

## SPECIFICATIONS

### Electrical Ratings

**Current Draw:**.....50mA (not including PGM output)

## PHYSICAL

**Dimensions (HxWxD):**..... 3<sup>5</sup>/<sub>8</sub>" x 7" x 1<sup>5</sup>/<sub>8</sub>"

**Operating Temperature:**..... 0 - 49°C (32-120°F)


## AGENCY LISTINGS

- UL365: Police Station Alarm Units
- UL609: Local Burglar Alarm Units and Systems
- UL864 9th Edition: Commercial Fire
- UL985: Household Fire Warning System Units
- UL1023: Household Burglar Alarm System Units
- UL1610: Central Station Burglar Alarm Units
- CSFM: California State Fire Marshall (Pending)

## ORDERING INFORMATION

**GEM-EZM4:** 4 Point Expansion Module.

**GEM-EZM8:** 8 Point Expansion Module.

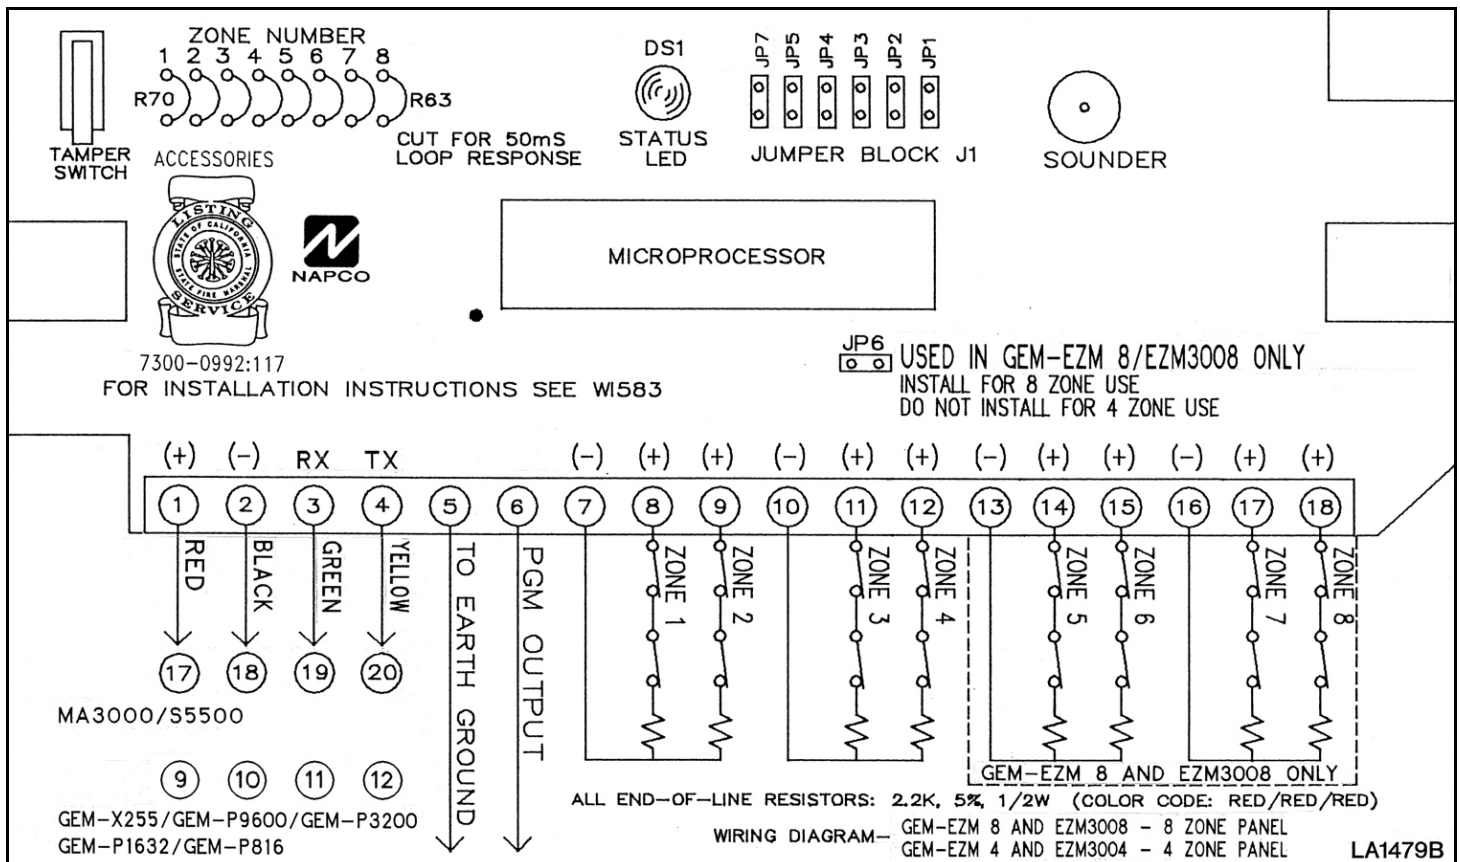

GEMC-EZM8 Wiring Diagram