

Programming the RC-10/RG-10 Receiver & TD-10 Transmitter

RC-10 / RG-10

Basic Specs: > 9V DC freq 418mhz Operating Temp 15°F~104°F

The RC-10/RG-10 is ready for programming right out of the box. When powered up, the RC-10 will make two quick tones and the green LED will continue to flash to indicate that it's in the program mode. The number one LED will flash to indicate that zone one is ready to be programmed.

The RG-10 will operate in the same way, with the one exception of making two quick tones. The RG-10 does not have an internal speaker.

NOTE:

If the previous information is correct for your receiver then you can skip step one and start with step two.

↓ Programming:

- 1. To access the program mode press and hold Switch 1 until Green LED flashes.*
- 2. Select the zone number by pressing Switch 2 until desired zone LED is flashing. All three zones flashing indicate zone 4 is ready to be programmed.*
- 3. Activate the TD-10 Transmitter that will be assigned to the selected zone. A programmed zone will display a solid LED.*
- 4. Repeat steps 2 and 3 for additional transmitters. (maximum of 4)*
- 5. Press switch 2 until the Green LED is on. This will exit you from the program mode.*

↓ Relay Settings:

Basic Specs: > Form C Max 1A/50VAC DC24VAC

- 1. Press Switch 1 twice to show current relay setting.*
- 2. Press Switch 2 to toggle through relay settings.*

<i>Zone one flashing</i>	<i>= 1 second relay setting</i>
<i>Zone two flashing</i>	<i>= 5 seconds</i>
<i>Zone three flashing</i>	<i>= 30 seconds</i>
<i>All three zones solid</i>	<i>= 60 seconds</i>
<i>All three zones flashing</i>	<i>= Utility Mode</i>

- 3. Receiver will learn settings automatically after 5 seconds of being programmed.*

NOTE:

- A. Zone 4 will latch until switch 2 is pressed.*
- B. Utility mode enables zones 1 and 2 for chime only and zone 3 activates the relay for 5 seconds.*

↓ Volume Control:

Basic Specs: > 0-80db max. 4 volume levels

- 1. Press Switch 2 to toggle through volume settings. Receiver will learn this setting automatically in aprox. 5 seconds.*

↓ Factory Default:

Turn RC-10 / RG-10 off, depress switch number one and hold as you power on the unit. This will erase all previously programmed settings.