

WALL MOUNT PATCH PANEL QUICK START GUIDE




Thank you for purchasing this INTELLINET NETWORK SOLUTIONS™ Wall Mount Patch Panel.

Follow the steps on this quick start guide for easy installation and use of either the Cat5e or Cat6 version of this product.



12-port Cat5e UTP model shown

IDC (3 options)

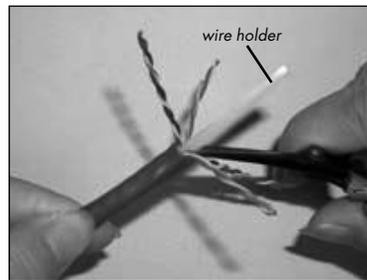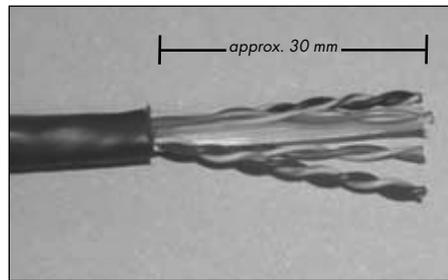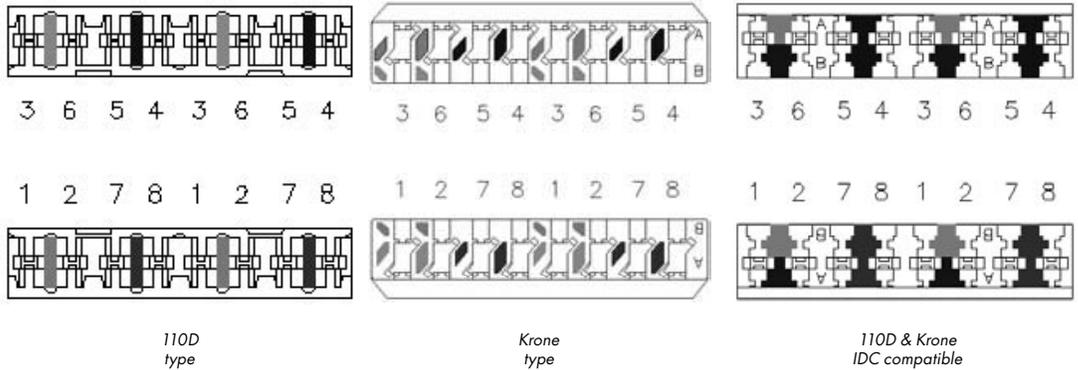

1. Carefully strip away approximately 30 mm of the cable jacket(s) (above left) to be connected to the Patch Panel, separating the wires into four pairs. Using a wire cutter, cut the wire holder (above right) flush with the cable jacket.

T568A

- PIN 5 WHITE/BLUE
- PIN 4 BLUE
- PIN 1 WHITE/GREEN
- PIN 2 GREEN
- PIN 3 WHITE/ORANGE
- PIN 6 ORANGE
- PIN 7 WHITE/BROWN
- PIN 8 BROWN

T568B

- PIN 5 WHITE/BLUE
- PIN 4 BLUE
- PIN 1 WHITE/ORANGE
- PIN 2 ORANGE
- PIN 3 WHITE/GREEN
- PIN 6 GREEN
- PIN 7 WHITE/BROWN
- PIN 8 BROWN



2. Follow the IDC color-code chart above to position the wires, then use a Krone punch-down tool to crimp and connect them.



www.intellinet-network.com

Are you completely satisfied with this product?
Please contact your INTELLINET NETWORK SOLUTIONS™ dealer with comments or questions.

Copyright © INTELLINET NETWORK SOLUTIONS
All products mentioned are trademarks or registered trademarks of their respective owners.