


### Assembly - Step 4:

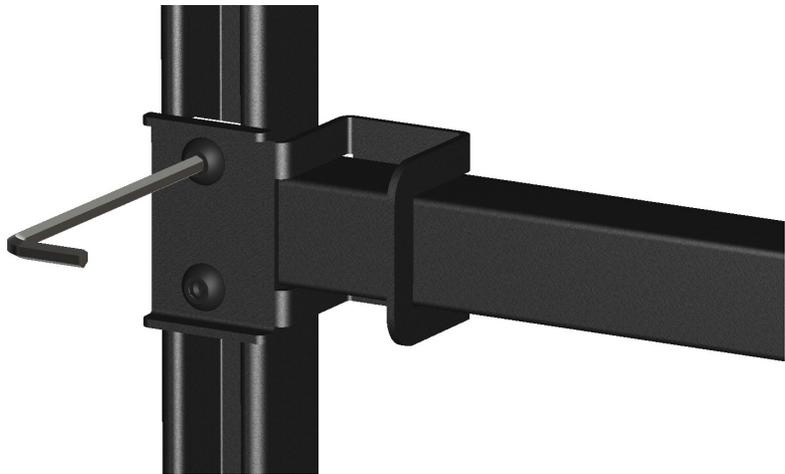

Adjust height of both Brackets until Bar is level.  
Use Hex Wrench to secure bolts.



For details about product warranty, please visit [www.kendallhoward.com](http://www.kendallhoward.com)

**DISCLAIMER:** Kendall Howard LLC. endeavors to make this manual accurate and complete. However, Kendall Howard LLC makes no representations or warranties of any kind, expressed or implied, about whether the use of products contained herein would infringe any rights or the correctness, accuracy or reliability of the information contained herein or that said information covers all details, conditions or variations. The information herein does not provide for every possible contingency in connection with the installation or use of the product(s). The information contained in this document is subject to change without notice or obligation. Kendall Howard LLC assumes no responsibility for the accuracy, completeness or reliability of the information contained in this document. Any reliance placed on the information is therefore strictly at your own risk.

## Instructions / Directions

Performance Accessory Bar  
# 5200-3-500-XX (XX = Length)



[www.kendallhoward.com](http://www.kendallhoward.com)

**KENDALL HOWARD**  <sup>TM</sup>  
INNOVATORS IN PRODUCT DESIGN

Address: 10152 Liberty Lane  
Chicago City, Minnesota, 55013  
United States of America


Phone: 651-213-1333  
Fax: 800-418-6897

## Tools Needed:

7/32" Hex Wrench



## Assembly - Step 1:

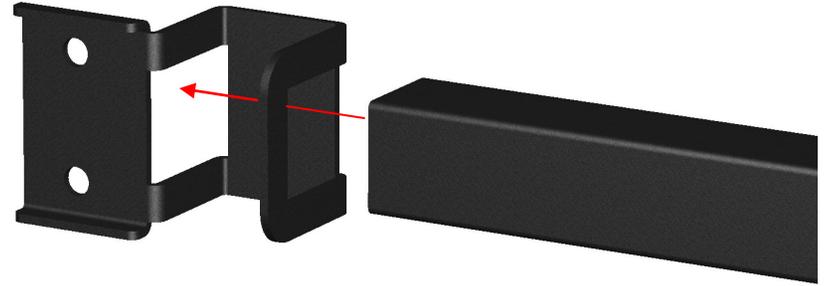


Slide both Mounting Brackets on both ends of Accessory Bar.

## Included:

(1x) Accessory Bar



(2x) Mounting Brackets

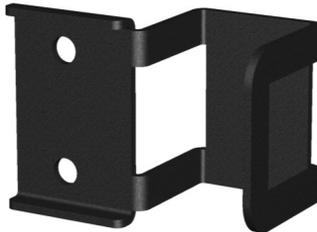


(4x) Bolt 3/8 - 16 x 1.5 in.



(4x) Channel Nut 3/8 in.



## Assembly - Step 2:

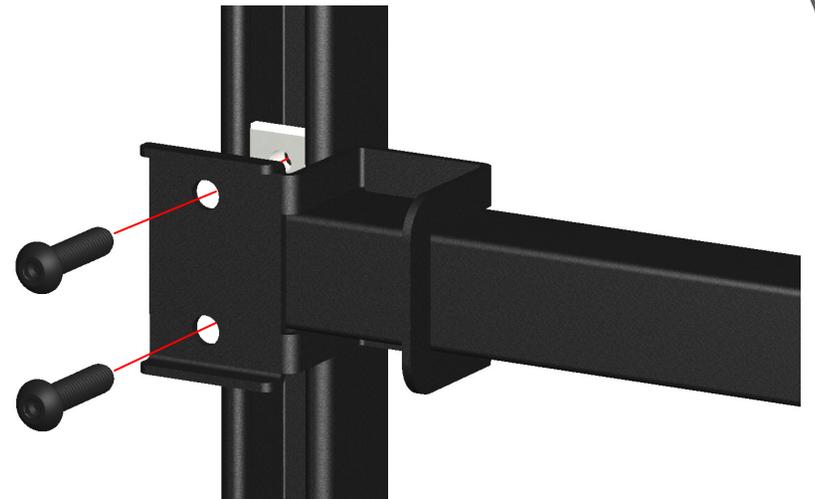

Place Channel Nuts behind inside Flanges of Uprights. Install Bolts through Mounting Bracket into Channel Nuts.

2

3