



Snap-N-Seal®


CABLE SERIES: 59 OR 6
TOOLS: CPLCCT-SLM or SNSUTL
TIP: NONE
STRIP TOOLS: PSA59/6, CST596711
TBPST, TBPST596

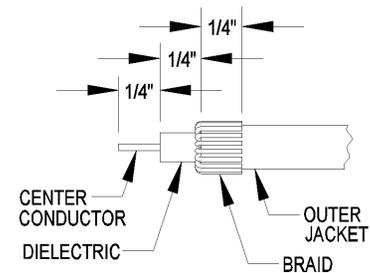

BNC INSTALLATION INSTRUCTIONS

- Use an industry standard 1/4" x 1/4" cable prep tool. Assure that the braid is folded back onto the jacket as shown above.
- Insert the prepared cable according to figure #1.
- The BNC is a blind entry connector. Once the cable is fully inserted into the connector, the center pin will align with the outer edge of the inner ring as shown in figure #2 and figure #3.
- Refer to the instructions for CPLCCT-SLM or SNSUTL tool to terminate the connector.

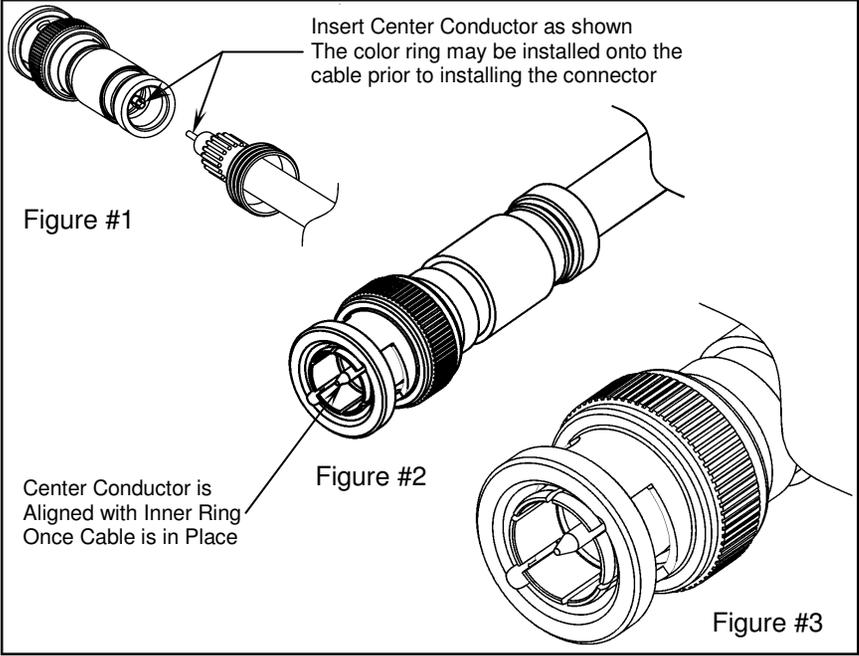

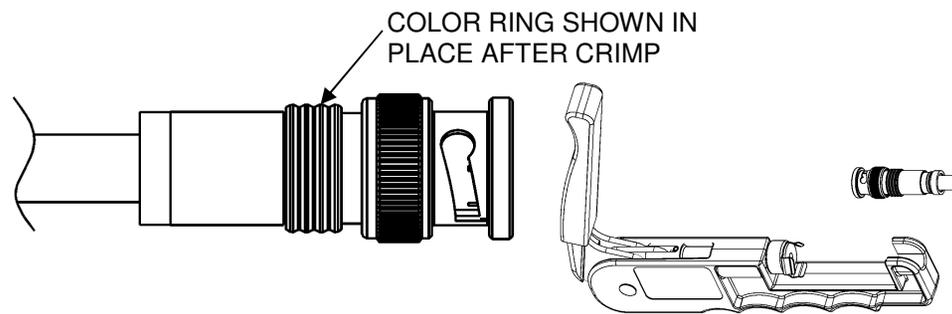

CPLCCT-SLM Tool Instructions

The BNC connector does not need a tip. Insert the prepared connector into the BNC spring clip.

Grasp the body of the tool with your fingers and start to close the handle of the tool. As the handle closes, the plunger slides towards the yoke. When the handle is completely closed against the body, the connector has been terminated.

