


# KENDALL HOWARD ®

## Assembly Instructions

# 41U Cable Cove 2-Post Rack

Part Number: 1911-3-000-41

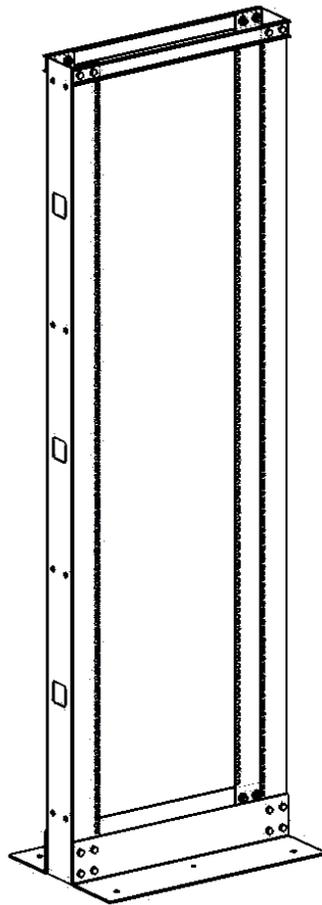


Address: 10152 Liberty Lane  
Chisago City, Minnesota, 55013  
United States of America

Phone: 651-213-1333  
Fax: 800-418-6897


[www.kendallhoward.com](http://www.kendallhoward.com)

Tools Needed:

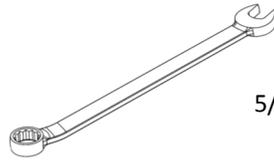

5/16" Wrench

What's in the box:

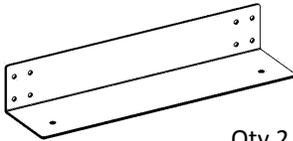

Qty 2 - Base Plates



Qty 2—Top Braces




Qty 2—41U Vertical Rail Channels



Qty 24 - Washers






Qty 24 - Nuts







Qty 24 - Bolts




Step 1

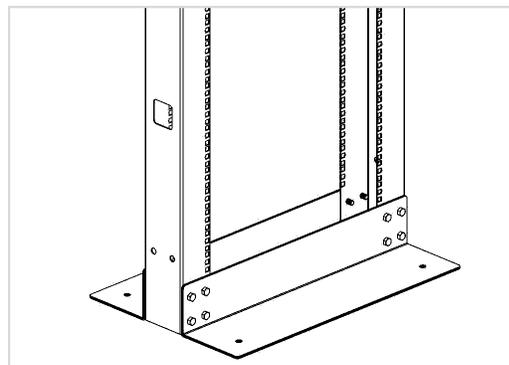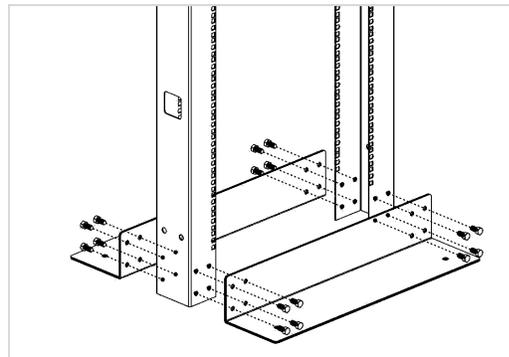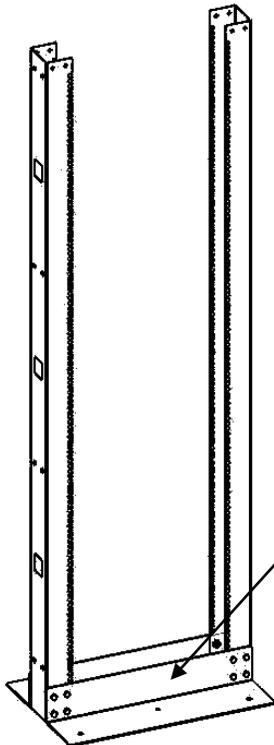





Step 2

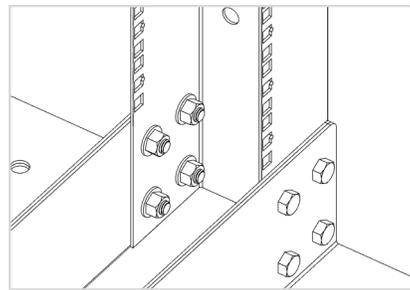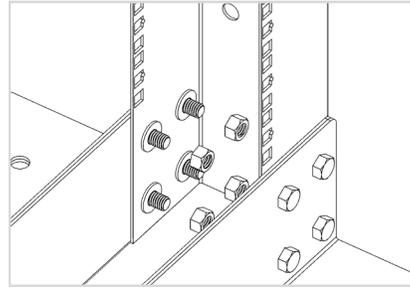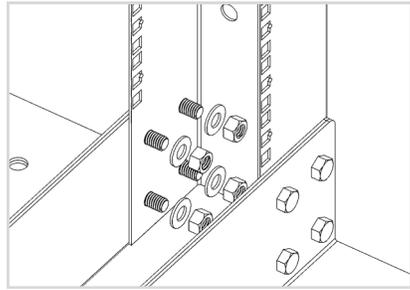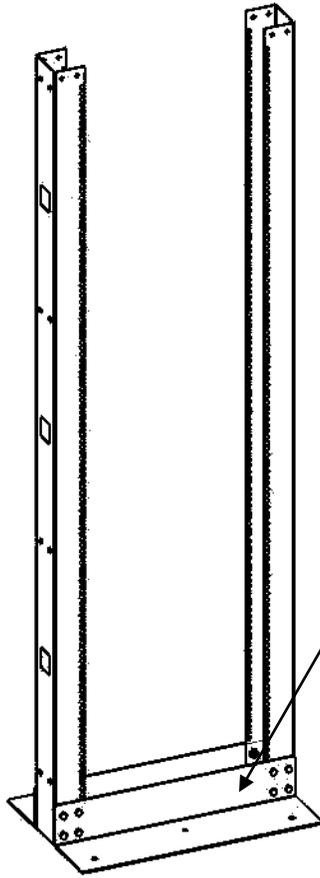

Step 3

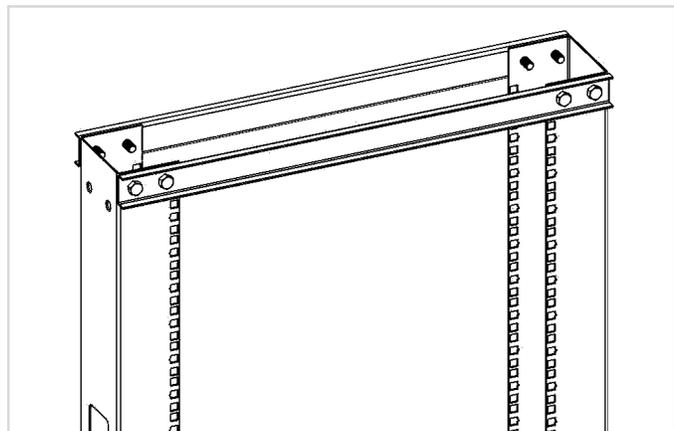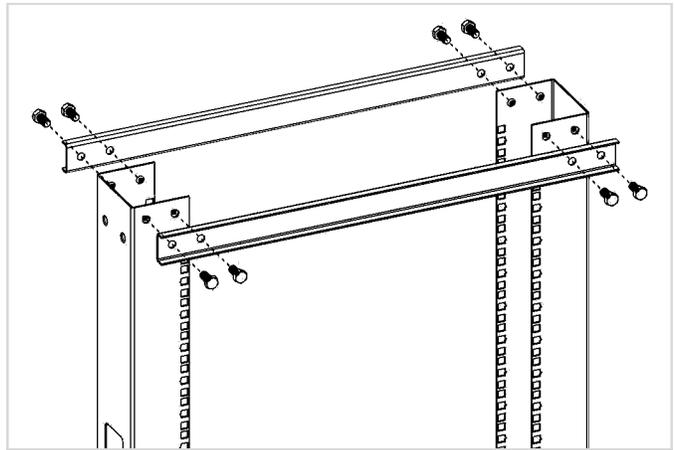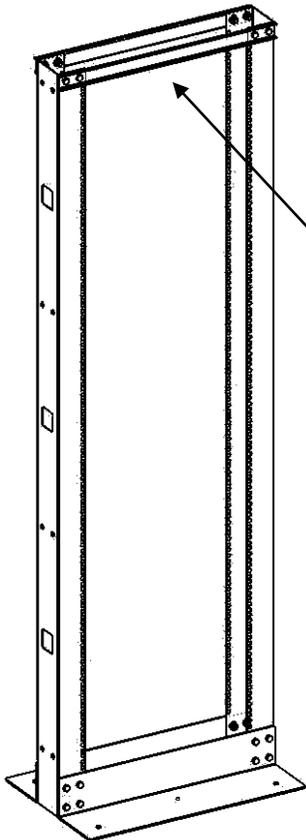

Step 4

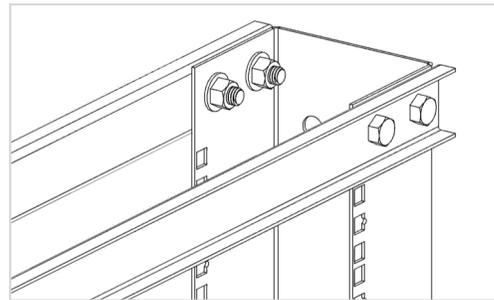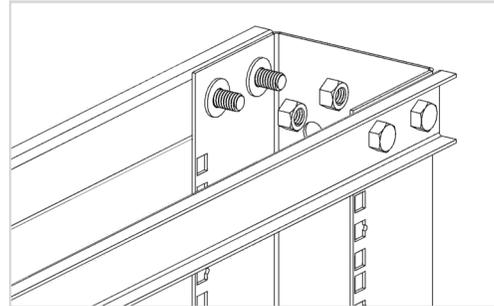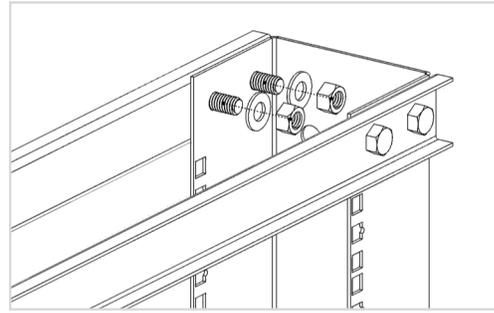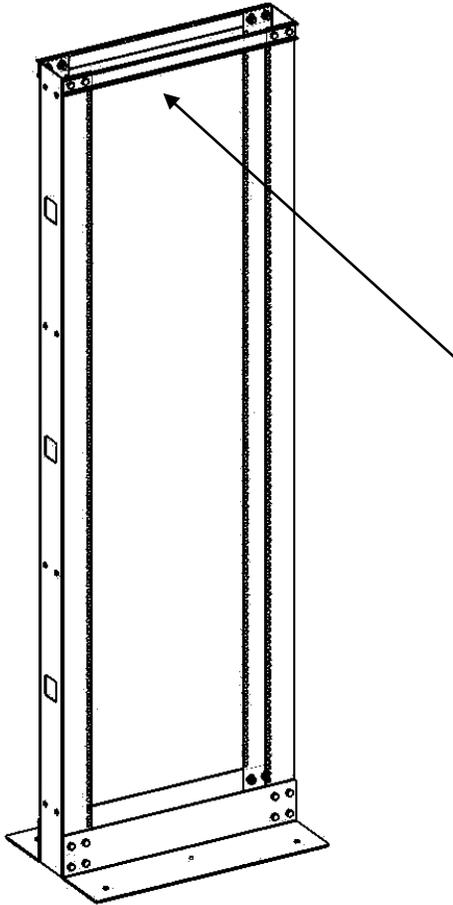

Assembly Tip: Hand tighten all bolts until the entire rack is assembled. Then go back and tighten them with the wrench.

For details about product warranty, please visit [www.kendallhoward.com](http://www.kendallhoward.com)

**DISCLAIMER:** Kendall Howard LLC. endeavors to make this manual accurate and complete. However, Kendall Howard LLC makes no representations or warranties of any kind, expressed or implied, about whether the use of products contained herein would infringe any rights or the correctness, accuracy or reliability of the information contained herein or that said information covers all details, conditions or variations. The information herein does not provide for every possible contingency in connection with the installation or use of the product(s). The information contained in this document is subject to change without notice or obligation. Kendall Howard LLC assumes no responsibility for the accuracy, completeness or reliability of the information contained in this document. Any reliance placed on the information is therefore strictly at your own risk.