

Compact outdoor detector

fit series

WIRELESS MODEL

FTN-R	Battery operated model with 2 PIRs
FTN-RAM	FTN-R with anti-masking

Multilingual instructions

Visit to the Web site to find various language versions.

<https://navi.optex.net/manual/08699/>



< FEATURES >

- Long battery life
- Easy wiring by a connector
- Multi fixing separate box
- Compact design
- 190° adjustable bracket
- Intelligent AND logic
- Digital anti-masking (RAM model)
- Wall tamper (option)

< CONTENTS >

1 INTRODUCTION		4-2 BATTERY SAVING TIMER	7
1-1 BEFORE INSTALLATION	1	4-3 ALARM & TROUBLE OUTPUT	8
1-2 PARTS IDENTIFICATION	2	4-4 LED	8
1-3 DETECTION AREA	2	4-5 PIR SENSITIVITY	8
2 INSTALLATION		4-6 ANTI-MASKING.....	8
2-1 WIRING DIAGRAM	2	5 OTHERS	
2-2 TRANSMITTER PREPARATION	3	5-1 WALL TAMPER (OPTION) CONNECTION	9
2-3 BEFORE WALL MOUNTING	3	5-2 LED LIGHT PATTERN	9
2-4 STACKING METHOD.....	4	6 BATTERY	
2-5 SIDE-BY-SIDE AND TOP-TO-BOTTOM METHOD ...	6	6-1 HOW TO REPLACE BATTERY	9
3 WALK TEST		6-2 BATTERY LIFE	9
3-1 WALK TEST	7	7 SPECIFICATIONS	
4 DIP SWITCH SETTING		7-1 SPECIFICATIONS.....	10
4-1 WALK TEST MODE	7	7-2 DIMENSIONS.....	10

1 INTRODUCTION


1-1 BEFORE INSTALLATION

Warning	Failure to follow the instructions provided with this indication and improper handling may cause death or serious injury.
Caution	Failure to follow the instructions provided with this indication and improper handling may cause injury and/or property damage.

The check mark indicates recommendation. The six sign indicates prohibition.


Warning	Caution	Caution
<p>Do not remove the PCB.</p>	<p>Do not remove the separate box tamper.</p>	<p>Do not touch the PCB except for the DIP switch.</p>
<p>Mounting height.</p> <p>0.8 to 1.2 m (2.6 to 3.9 ft.) Parallel</p>	<p>Keep the detector parallel to the ground.</p> <p>Tilt</p>	<p>Consider the direction of the intruder, for the setting of the detection area.</p>
<p>Install the detector in a place where it is free from false alarm factors. For example:</p>		
<p>• Sunlight and reflection</p>	<p>• Heat source</p>	<p>• Objects moving in the wind</p>

1-2 PARTS IDENTIFICATION

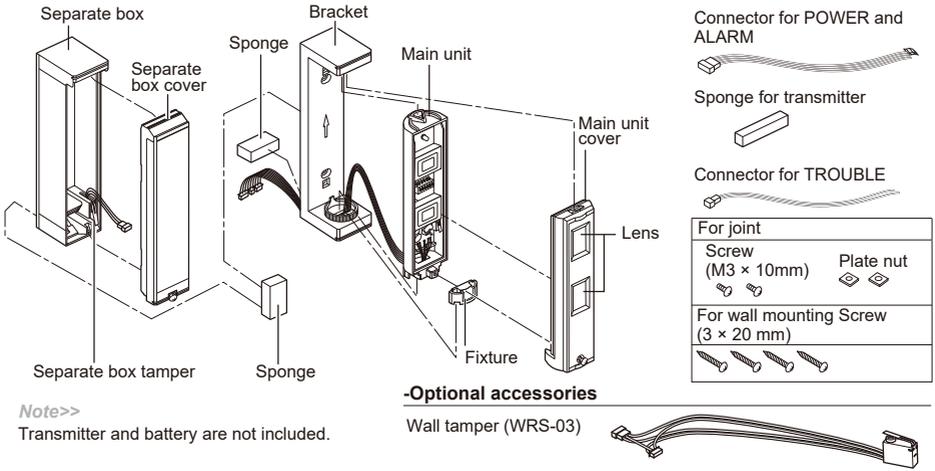


1-3 DETECTION AREA

Top view

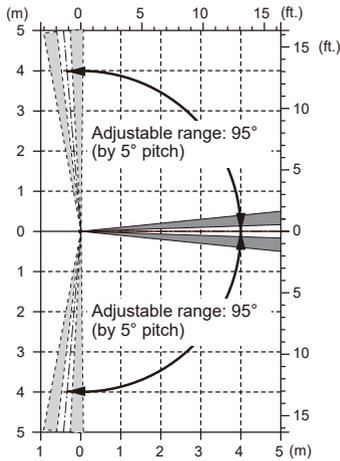


Side view

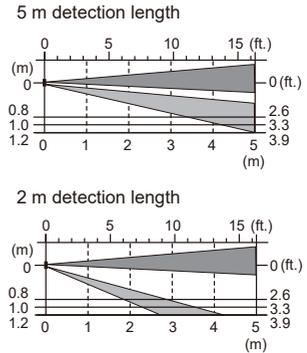

2 INSTALLATION


2-1 WIRING DIAGRAM

- Overall wiring diagram

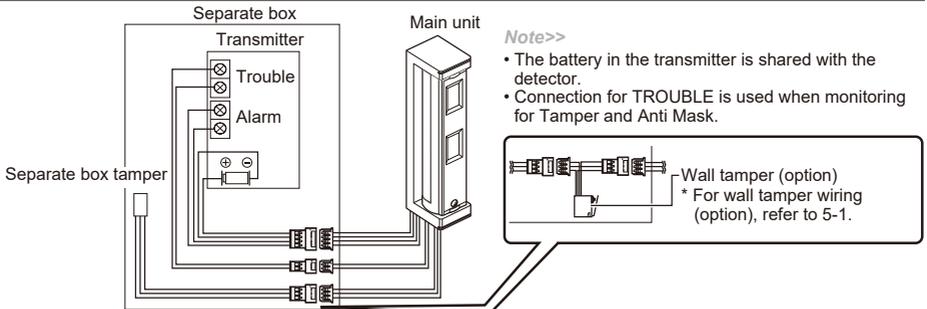

2-2 TRANSMITTER PREPARATION

The transmitter used should have the internal dimensions of H 130 × W 30 × D 35 mm.
(H 5.12 × W 1.18 × D 1.38 inches)

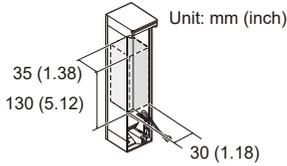

Connectors to be used

Connector for POWER and ALARM




Connector for TROUBLE




How to position a battery

Red Black




- When monitoring ALARM and TROUBLE using the transmitter with 1 external input

External input is N.C.



... DIP switch 3: OFF (N.C.)


External input is N.O.



... DIP switch 3: ON (N.O.)

- To monitor only the ALARM using a transmitter with 1 external input


Connector for
POWER and
ALARM



- To monitor the ALARM and TROUBLE using a transmitter with 2 external inputs


Connector for
TROUBLE

Connector for
POWER and
ALARM

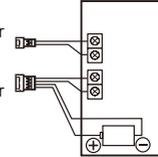


2-3 BEFORE WALL MOUNTING


1 Open the main unit cover.

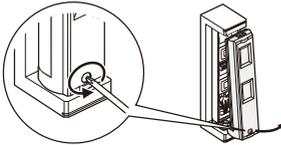

2 Remove the fixture.

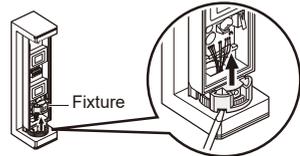


3 Hold the top of the bracket and remove the main unit.

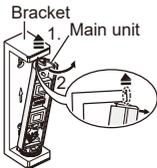


Note>>

• Be sure to keep connectors installed through the bottom part of bracket after main unit is removed.



4 Open the separate box.

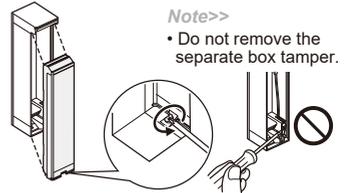

Note>>

• Do not remove the separate box tamper.

5 Select the mounting method.

Stacking method (2-4)



Side-by-side method (2-5)



Top-to-bottom method (2-5)




Note>>

• Be sure to mount the main unit on the top.


2-4 STACKING METHOD

For the side-by-side method and the top-to-bottom method, refer to page 6.

6 Open the knockout.

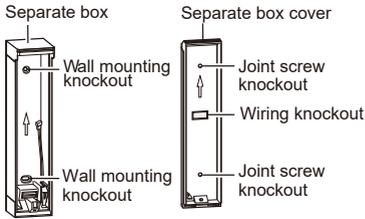


7 Pull the connectors through the wiring knockout.

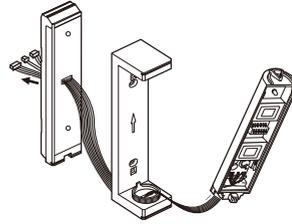


8 Attach the separate box cover and the bracket.

Note>>


- Be careful not to attach separate box cover upside down.
- Be careful not to pinch wires.

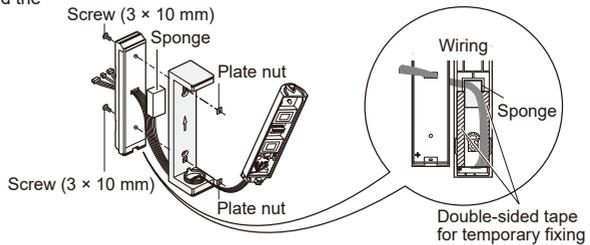


9 Hold the top part of the bracket and mount the main unit.

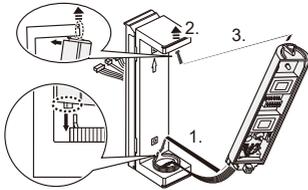

10 Mount the separate box on the wall.

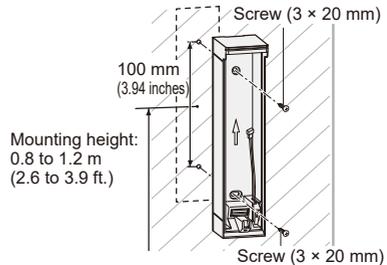


11 Connect the connectors.

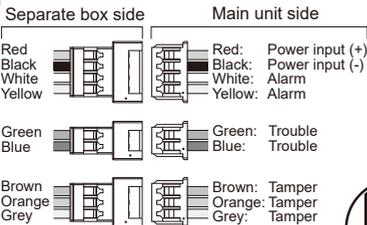

Notes>>

- The tamper output is not exclusive.
- The anti-masking and tamper circuits share the trouble output.
- For the wall tamper wiring connection (option), refer to 5-1.
- If the tamper connection is made between the main unit and the separate box, cut the jumper wire (orange) as illustrated. Otherwise, neither the separate box tamper nor the option wall tamper switch will be activated. Conversely, if the tamper connection is not made between them even the jumper cutting situation, the trouble signal will remain activate.

12 Install the transmitter and attach the separate box cover.

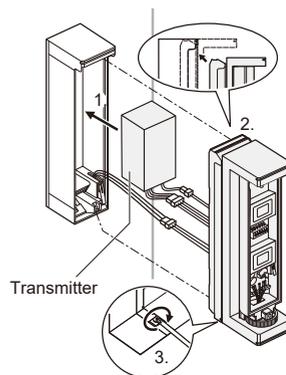


Note>>

- Please use the sponge for transmitter when needed.

13 Determine the horizontal detection angle and attach the fixture.


Note>>

- To make adjustments, remove the fixture.

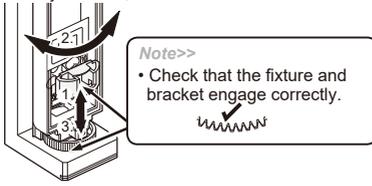


Note>>


Align the detection area parallel to the wall to reduce interference with the wall.

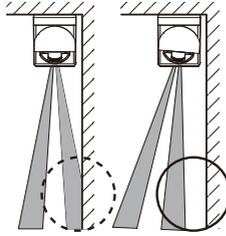


- When the unit is mounted on the corner to look ahead along the wall, choose the guide-mark located on the opposite side of the wall.

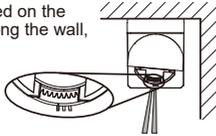

- When the unit is mounted on the wall to look transversely, choose the guide-mark engraved.

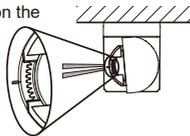

14 Determine the detection length. (2 m or 5 m)

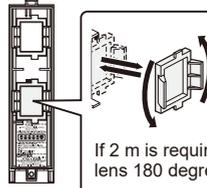


If 2 m is required, rotate the lower lens 180 degrees.


Note>>

- Do not remove the upper lens.


5 m detection length (Factory default)

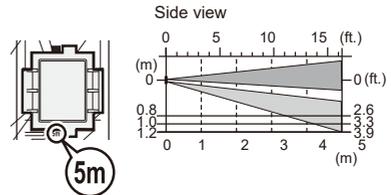

2 m detection length

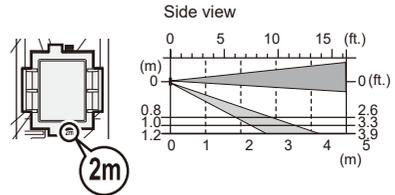


15 Attach the main unit cover.

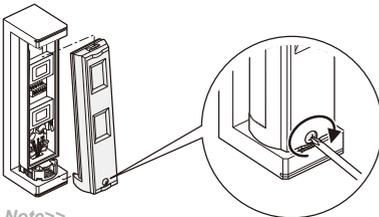

Note>>

- To prepare for walk test, check that DIP switch 1 (WALK TEST MODE) is set to "ON (TEST)" before attaching main unit cover.


16 Perform walk test.

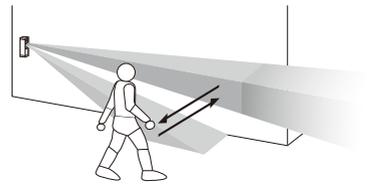

17 After walk test is complete, set DIP switch 1 (WALK TEST MODE) from "ON" to "OFF".

Note>>

- The battery life will be shortened unless the DIP switch 1 is set to "OFF".
- To use the LED in normal operating condition, set the DIP switch 4 to "ON".


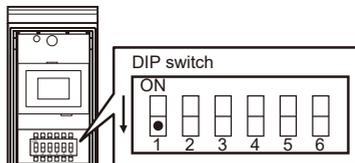


2-5 SIDE-BY-SIDE AND TOP-TO-BOTTOM METHOD


For the stacking method, refer to 2-4.

6 Open the knockout.


Separate box

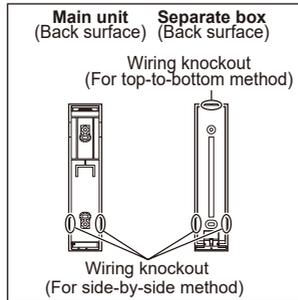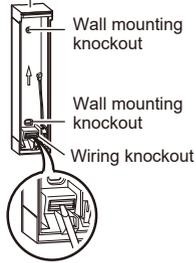


7 Pull the wire connectors through wiring knockout.

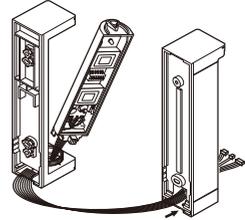


8 Mount the bracket and the separate box to the wall.

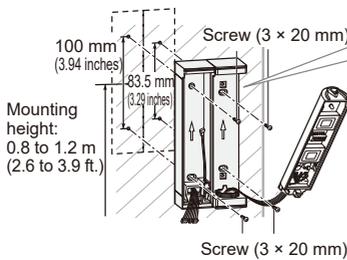


Mounting height:
0.8 to 1.2 m
(2.6 to 3.9 ft.)

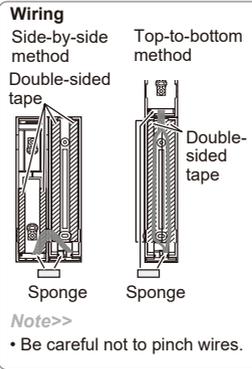

9 Hold the top part of the bracket and mount the main unit.

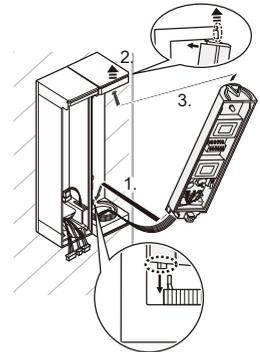


10 Connect the connectors.

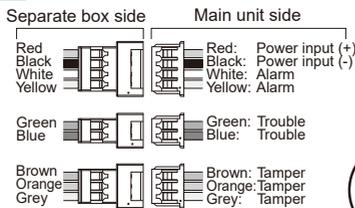

Notes>>

- The tamper output is not exclusive. The anti-masking and tamper circuits share the trouble output.
- For the wall tamper wiring connection (option), refer to 5-1.
- If the tamper connection is made between the main unit and the separate box, cut the jumper wire (orange) as illustrated. Otherwise, neither the separate box tamper nor the option wall tamper switch will be activated. Conversely, if the tamper connection is not made between them even the jumper cutting situation, the trouble signal will remain activate.

11 Install the transmitter and attach the separate box cover.

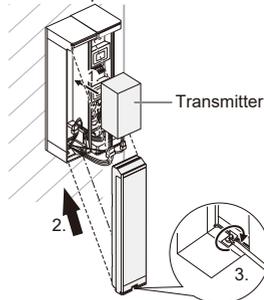


12 For the subsequent procedure, refer to steps 13 to 17 (page 5).

3 WALK TEST

3-1 WALK TEST


- 1 Set the DIP switch 1 (WALK TEST MODE) to "ON (TEST)".

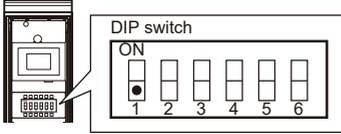

Note>>

- The switch is set to "ON (TEST)" by factory default.


- 3 Set the DIP switch 1 (WALK TEST MODE) to "OFF (NORM)".

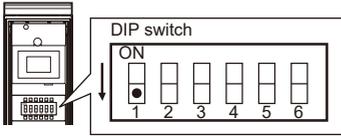



Note>>

- The battery life will be shortened unless the DIP switch 1 is set to "OFF".
- To use the LED in normal operating condition, set the DIP switch 4 to "ON".

- 2 Check that LED lights for 2 seconds when the intended object is detected.

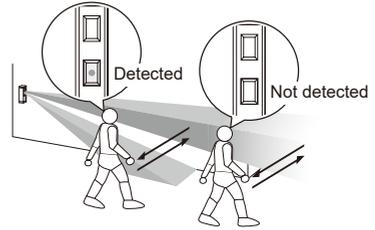


4 DIP SWITCH SETTING

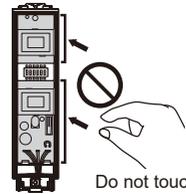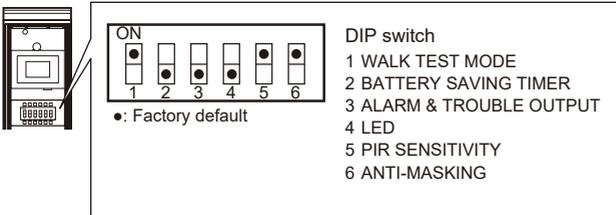

Do not touch the PCB except for the DIP switch.

4-1 WALK TEST MODE


DIP switch 1 FTN-R
FTN-RAM



Position	Function
TEST (Factory default)	<ul style="list-style-type: none"> • The LED lights irrespective of the DIP switch 4 (LED) setting. • The DIP switch 2 (BATTERY SAVING TIMER) setting is inactive.
NORM	<ul style="list-style-type: none"> • The LED lights depending on the DIP switch 4 (LED) setting. • The DIP switch 2 (BATTERY SAVING TIMER) setting is active.

4-2 BATTERY SAVING TIMER

DIP switch 2 FTN-R
FTN-RAM



Position	Function
5S	5 sec.
120S (Factory default)	120 sec.


Note>>

- The detector will not generate alarms at intervals shorter than the specified time.

4-3 ALARM & TROUBLE OUTPUT

DIP switch 3

FTN-R
FTN-RAM




Position	Function
N.O.	N.O. output
N.C. (Factory default)	N.C. output

4-4 LED

DIP switch 4

FTN-R
FTN-RAM




Position	Function
ON	LED ON
OFF (Factory default)	LED OFF <i>Note>></i> • If the LED lights, check the DIP switch 1 (WALK TEST MODE) setting.

4-5 PIR SENSITIVITY

DIP switch 5

FTN-R
FTN-RAM




Position	Function
STD (Factory default)	Normal sensitivity
LOW	Low sensitivity

4-6 ANTI-MASKING

DIP switch 6

FTN-R
FTN-RAM




Position	Function
ON (Factory default)	ANTI-MASKING ON
OFF	ANTI-MASKING OFF

-ANTI-MASKING function

When masking condition continues more than 3 minutes, TROUBLE will be generated. TROUBLE is generated after 20 seconds under the anti-masking test mode.

Teaching mode starts when both the separate box cover and the main unit cover are attached. Please be careful not to leave any object within 1 m from the unit.

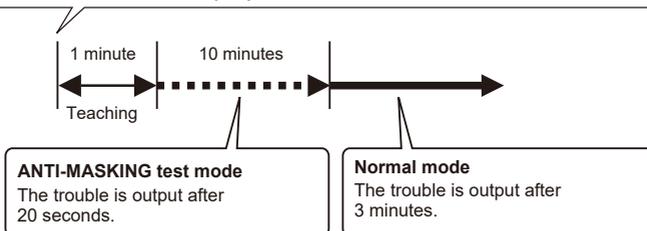


5 OTHERS


5-1 WALL TAMPER (OPTION) CONNECTION

Connect the tamper connector as shown below when connecting a wall tamper (option).


Separate box side Main unit side



Mounting position
Stacking method

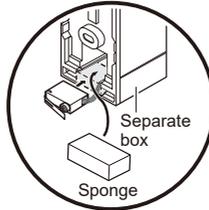


Side-by-side method and top-to-bottom method

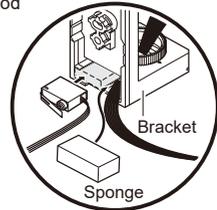

5-2 LED LIGHT PATTERN

The following explains the LED light pattern.



Detector condition	LED indicator
Warm-up <i>Notes</i> >> • The LED blinks even if the DIP switch 4 (LED) is set to "OFF".	→ 120 sec. Blinks for approx. 120 seconds.
Alarm	→ 2 sec. Lights for 2 seconds.
Masking detection (FTN-RAM only)	→ → → Blinks 3 times and then repeats.


6 BATTERY

The detector shares the battery with the transmitter. Check that the 2.5 to 10.0 V power battery is used for the transmitter.


6-1 HOW TO REPLACE BATTERY

- 1 Open the separate box, and disconnect the transmitter connector. (It is not necessary for the main unit to be opened.)


Stacking method

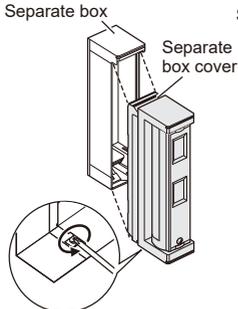

Side-by-side method and top-to-bottom method

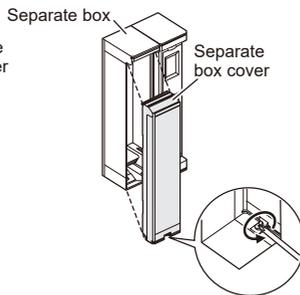

- 2 Replace the battery.



- 3 Connect the connector, and close the separate box.

Note>>

- Check that the warm-up period is started.

6-2 BATTERY LIFE

The values indicated are only for reference on condition that the detector is exceptionally operated by the sole battery. It is impossible to indicate the battery life under the normal operation as the battery in the transmitter is shared with the detector.

	Interval 120 sec	Interval 5 sec
CR123A (3 V, 1300 mAh)	Approx. 6 years	Approx. 5 years
CR2 (3 V, 750 mAh)	Approx. 4 years	Approx. 3 years
1/2AA (3.6 V, 1000 mAh)	Approx. 5 years	Approx. 4 years

Notes>>

- Data shown here is when the LED is off, AM is on. Battery life becomes shorter when the LED is on.

7 SPECIFICATIONS

7-1 SPECIFICATIONS



Model	FTN-R	FTN-RAM
Detection method	Passive infrared	
PIR coverage	5 × 1 m (16.4 × 3.3 ft.)	
Detection length limit	2 m, 5 m (6.6 ft., 16.4 ft.)	
Detectable speed	0.3 to 1.5 m/s (1 to 4.9 ft./s)	
Sensitivity	2.0°C (at 0.6 m/s) (3.6°F (at 2 ft./s))	
Operation voltage	2.5 to 10 VDC	
Power input	3 to 9 VDC (Lithium or Alkaline Battery)	
Current draw	9 μA (at stand-by)/ 3 mA (max.) (at 3 VDC)	10 μA (at stand-by)/ 3 mA (max.) (at 3 VDC)
Alarm period	2.0 ±1.0 sec.	
Warm-up period	Approx. 120 sec. (LED blinks)	
Alarm output	N.C./N.O. Selectable-Solid State Switch 10 VDC 0.01 A (max.)	
Trouble output	N.C./N.O. Selectable-Solid State Switch 10 VDC 0.01 A (max.)	
LED indicator	Enable: During DIP switch 1 (WALK TEST MODE) or DIP switch 4 (LED) ON Disable: During normal operation Light/Blink: Warm-up, alarm, masking detection (FTN-RAM only)	
Operation temperature	-20°C to +60°C (-4°F to +140°F)	
Environment humidity	95% max.	
Weatherproof	IP55	
Mounting	Wall (Outdoor, Indoor)	
Mounting height	0.8 to 1.2 m (2.6 to 3.9 ft.)	
Weight	190 g (6.7 oz.)	
Accessories	Connector for POWER and ALARM, connector for TROUBLE, plate nut × 2, screw (M3 × 10 mm) × 2, screw (3 × 20 mm) × 4, sponge for transmitter	

* Specifications and design are subject to change without prior notice.

Note>>

- These units are designed to detect an intruder and activate an alarm control panel. Being only a part of a complete system, we cannot accept responsibility for any damages or other consequences resulting from an intrusion.

7-2 DIMENSIONS

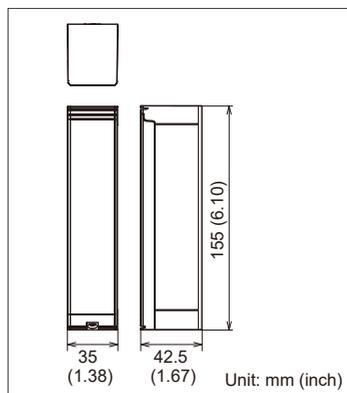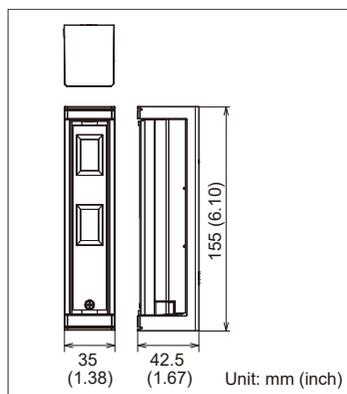

■ EU & UK contact information

<https://navi.optex.net/cert/contact/>



OPTEX CO., LTD. (JAPAN)

www.optex.net

OPTEX INC./AMERICAS HQ (U.S.)
www.optexamerica.com

OPTEX SECURITY SAS (France)
www.optex-europe.com/fr

OPTEX KOREA CO.,LTD. (Korea)
www.optexkorea.com

OPTEX (EUROPE) LTD./EMEA HQ (U.K.)
www.optex-europe.com

OPTEX SECURITY Sp.z o.o. (Poland)
www.optex-europe.com/pl

OPTEX (DONGGUAN) CO.,LTD. SHANGHAI OFFICE (China)
www.optexchina.com

OPTEX SECURITY B.V. (The Netherlands)
www.optex-europe.com/nl

OPTEX PINNACLE INDIA, PVT., LTD. (India)
www.optexpinnacle.com

OPTEX (Thailand) CO., LTD. (Thailand)
www.optex.co.th

Copyright (C) 2008-2022 OPTEX CO.,LTD.